



B5, V1 安装
安装及外形尺寸

机座	安装及外形尺寸																						
	D		E		F		G		T	M	N	P	R	S	AD	AE	AC	LA	HE	L			
	极数																			极数			
	2	4,6 8,10	2	4,6 8,10	2	4,6 8,10	2	4,6 8,10												2	4,6,8	10	
63	11		23		4		8.5	3.0	115	95	140	0	4xΦ10	165	70	130	12	237	270				
71	14		30		5		11	3.0	130	110	160	0	4xΦ10	165	80	145	12	250	300				
80	19		40		6		15.5	3.5	165	130	200	0	4xΦ12	175	100	165	12	320	330				
90S																				360			
90L	24		50		8		20	3.5	165	130	200	0	4xΦ12	175	100	180	12	330	385				
100L	28		60		8		24	4	215	180	250	0	4xΦ15	180	125	205	14	370	440				
112M	28		60		8		24	4	215	180	250	0	4xΦ15	175	125	230	14	373	460				
132S																				510			
132M	38		80		10		33	4	265	230	300	0	4xΦ15	185	150	270	14	438	550				
160M																				655			
160L	42		110		12		37	5	300	250	350	0	4xΦ19	208	175	330	16	500	695				
180M																				730	800		
180L	48		110		14		42.5	5	300	250	350	0	4xΦ19	202	175	360	18	520	750	820			
200L	55		110		16		49	5	350	300	400	0	4xΦ19	250	200	400	18	645	805	875			
225S																				865			
225M	55	60	110	140	16	18	49	53	5	400	350	450	0	8xΦ19	250	225	450	20	690	860	890		
250M	60	65	140		18		53	58	5	500	0	550	0	8xΦ19	275	275	500	22	745	945			
280S																				1010			
280M	65	75	140		18	20	58	67.5	5	0	450	550	0	8xΦ19	300	275	560	22	785	1060			
315S																				1300	1330		
315M	65	80	140	170	180	22	58	71	6	600	550	660	0	8xΦ24	400	330	630	25	1035	1380	1410		
315L																				1470	1500		
355S																				1530	1560		
355M	75	95	140	170	20	25	67.5	86	6	700	680	800	0	8xΦ24	450	400	750	30	1125	1530	1560		
355L																				1600	1630		